

 



 


 

 


 

 



 

 



 

 







Original	Substitut	Original	Substitut
	Power		Power
	Screen		Picture / Format
	Lang		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	www		Smart / List
	Red/▲		Red / Netflix / Search
	Red/▲		Shift + CH+ /
	Green/▼		Green / APP / Repeat
	Green/▼		Shift + CH- /
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6

Original	Substitut	Original	Substitut
	7		7
	8		8
	[≡]/Text		Text / Goto
	9		9
	0		0
	Recall		Back / Return
	Up		Up
	Menu		Menu / Home
	Left		Left
	Right		Right
	Return		Shift + Back / Return
	Down		Down
	OK		OK
	Source		AV / Input / RDS
	FAV		Fav / Marker / PC
	Presets		Setup / OPT /
	Sleep		Sleep / Timer





Original		Substitut		Original		Substitut	
V+	Vol+	[+ VOL]	Vol+				
P+	P+	[+ CH PAGE]	CH+ / Page+				
[INFO]	Info	[ANGLE INFO]	Info / Angle				
[Mute]	Mute	[DIMMER MUTE]	Mute / Dimmer				
[EPG]	EPG	[GUIDE EPG]	Guide / EPG / -/--				
V-	Vol-	[VOL -]	Vol-				
P-	P-	[CH PAGE -]	CH- / Page-				

