



Original	Substitut	Original	Substitut
	Power		Power
	Audio		Dual
	Tv/VCR		TV/R
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0/AUX		0
	X/0000		Exit
	Timer		AV
	'/'		Format
	Prog+		Ch +





Original	Substitut	Original	Substitut
	Power		Power
	Tv/VCR		TV/R
	Audio		Dual
	Review		Smart
	--:--		Guide
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0/AUX		0
	X/0000		Exit
	Timer		AV
	Prog		Sleep
	Timer/?		Subt
	'/'		Format
	30Sec >>		3D
	Play		Play
	Stop		Stop
	<<		<<
	>>		>>
	Rec		Rec
	Pause		Pause
	OK		Ok
	Menu		Menu
	Up/Tv Prog+		Up
	Down/Tv Prog-		Down
	Right/>>I/+		Right
	Left/I<<-		Left
	Start Debut+		Red





Original	Substitut	Original	Substitut
	Start Debut-		Green
	Stop Fin+		Yellow
	Stop Fin-		Blue
	Date+		Ch +
	Date-		Ch -





Original	Substitut	Original	Substitut
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Prog+		Ch +
	Prog-		Ch -

