






 



 
 






 

 






 





 






 










 

 

 



 



 

 






	Original	Substitut		Original	Substitut
	 Power	 Power		 Exit	 Exit
	 Mute	 Mute		 Up	 Up
	 1	 1		 Down	 Down
	 2	 2		 Right	 Right
	 3	 3		 Left	 Left
	 4	 4		 Ok	 Ok
	 5	 5		 Vol+	 Vol +
	 6	 6		 Vol-	 Vol -
	 7	 7		 Sound	 Shift + Dual
	 8	 8		 Pic	 Shift + Format
	 9	 9		 Ch+	 Ch +
	 0	 0		 Ch-	 Ch -
	 Audio	 Dual		 Sleep	 Sleep
	 Recall	 Back		 Aspect	 Format
	 Tv Menu	 Menu		 Freeze	 Eject
	 Source	 AV		 Tv/Radio	 TV/R
	 ChList	 List		 Text	 Text





	Original	Substitut		Original	Substitut
	Epg	 GUIDE	Guide		I <<
	Fav	 FAV PRE-CH	Pre Ch		>> I
	Info	 DISPLAY INFO	Info		Play
	Red	 A	Red		Pause
	Green	 B	Green		Stop
	Yellow	 C	Yellow		Rec/Rep
	Blue	 D	Blue		
	Reveal	 APP MEDIA	Media		
	Hold	 E-MANUAL D.MENU	D. Menu		
	Index	 SHIFT + DISPLAY INFO	Shift + Info		
	Subpage	 SHIFT + TIMER AV	Shift + AV		
	List	 HOME SMART	Smart		
	Mix	 SETTINGS OPT	Options		
	Subtitle	 AD SUBT	Subt		
	Size	 ECO 3D	3D		
	<<		<<		
	>>		>>		

	Original	Substitut		Original	Substitut
	I <<		I <<		
	>> I		>> I		
	Play	 PLAY MODE	Play		
	Pause		Pause		
	Stop		Stop		
	Rec/Rep	 REC MODE	Rec		

