 

 








 


 







 

 















 

 







 











 

 






| Original | Substitut | Original | Substitut |
|--|--|--|--|
|  POWER |  Power |  REPEAT/GREEN/▼ |  Green / APP / Repeat |
|  INFO |  Info / Angle |  7 |  7 |
|  HDMI CONTROL |  Smart / List |  8 |  8 |
|  SLEEP |  Sleep / Timer |  9 |  9 |
|  SCREEN |  Picture / Format |  ROOT/YELLOW |  Yellow / YouTube / Repeat |
|  SOURCE |  AV / Input / RDS |  RETURN |  Back / Return |
|  PRESETS |  Setup / OPT / |  0 |  0 |
|  1 |  1 |  MENU |  Menu / Home |
|  2 |  2 |  TITLE/BUE |  Sound / Title |
|  3 |  3 |  TITLE/BUE |  Blue / Prime Video / Random |
|  ZOOM/RED/▲ |  Zoom / Size |  UP |  Up |
|  ZOOM/RED/▲ |  Shift + CH+ / |  LEFT |  Left |
|  ZOOM/RED/▲ |  Red / Netflix / Search |  OK/SELECT |  OK |
|  4 |  4 |  RIGHT |  Right |
|  5 |  5 |  DOWN |  Down |
|  6 |  6 |  P+ |  CH+ / Page+ |
|  REPEAT/GREEN/▼ |  Shift + CH- / |  P- |  CH- / Page- |

Page-

| Original | Substitut | Original | Substitut |
|--|---|--|--|
|  REPEAT/GREEN/▼ |  Green / APP / Repeat |  7 |  7 |
|  8 |  8 |  9 |  9 |
|  ROOT/YELLOW |  Yellow / YouTube / Repeat |  RETURN |  Back / Return |
|  0 |  0 |  MENU |  Menu / Home |
|  TITLE/BUE |  Sound / Title |  TITLE/BUE |  Blue / Prime Video / Random |
|  UP |  Up |  LEFT |  Left |
|  OK/SELECT |  OK |  RIGHT |  Right |
|  DOWN |  Down |  P+ |  CH+ / Page+ |
|  P- |  CH- / Page- | | |





| Original | Substitut |
|----------|--|
| | V- |
| | V+ |
| | FAV |
| | LANG |
| | SUBTITLE |
| | MUTE |
| | SWAP/↔ |
| | EPG |
| | [*] / [·] |
| | TEXT |
| | C |
| | DISPLAY |
| | ANGLE |
| | SEARCH MODE |
| | REC |
| | STOP |
| | PLAY |
| | VOL- Vol- |
| | VOL+ Vol+ |
| | PC FAV MARKER Fav / Marker / PC |
| | LANG I/II Audio / Lang I/II |
| | EQ SUBTITLE Subtitle / EQ |
| | DIMMER MUTE Mute / Dimmer |
| | SHIFT + BACK Shift + Back / Return |
| | GUIDE EPG Guide / EPG / -/- |
| | TOP MENU D.MENU D.Menu / Top |
| | GOTO TEXT Text / Goto |
| | CLEAR EXIT CANCEL Exit / Cancel / Clear |
| | MEDIA DISPLAY Display / Media |
| | SHIFT + ANGLE INFO Shift + Info / Angle |
| | SHIFT + NETFLIX SEARCH Shift + Red / Netflix / |
| | REC MODE Rec / Rec Mode |
| | HOLD Stop / Hold |
| | SLOW Play / Slow |

| Original | Substitut |
|----------|-----------------------------------|
| | PAUSE |
| | TUNE- << / Tune- |
| | TUNE+ >> / Tune+ |
| | PRESET- I<< / Preset- |
| | PRESET+ >>I / Preset+ |
| | STEP-FREEZE Pause / Step / Freeze |

