



Original	Substitut
 Power	 Power
 I<<	 I<<
 >>I	 >>I
 <<	 <<
 >>	 >>
 Eject	 Eject
 Play / Pause	 Play
 Play / Pause	 Pause
 Stop	 Stop
 TV/TXT /	 Text
 Cancel / Zoom	 Shift + Eject
 Reveal / Subtitle	 Shift + Subt
 Hold / Menu	 Options
 Size / Angle	 Format
 Subpage / Title	 Shift + Text
 Index / Goto	 Media
 Red / Program	 Red

Original	Substitut
 Green / Slow	 Green
 Yellow / Repeat	 Yellow
 Blue / A-B	 Blue
 CH +	 Ch +
 CH -	 Ch -
 TV Menu	 Menu
 Source	 AV
 Vol +	 Vol +
 Vol -	 Vol -
 DTV	 Smart
 DVD-Setup	 D. Menu
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Exit	 Exit





Original		Substitut		Original		Substitut	
	Display	 + 	Shift + Info		Sleep		Sleep
	1		1		Info		Info
	2		2		Subtitle		Subt
	3		3		Channel List		List
	4		4		EPG		Guide
	5		5		TV / Radio		TV/R
	6		6		FAV		Pre Ch
	7		7				
	8		8				
	9		9				
	0		0				
	-/--	 + 	Shift + Guide				
	Recall		Back				
	Picture	 + 	Shift + Format				
	Sound		Dual				
	Nicam/A2	 + 	Shift + AV				
	Mute		Mute				

