



Original	Substitut	Original	Substitut
Power	Power	Clear	Shift + Exit / Cancel / Clear
Tv Power	Shift + Power	0	0
Open/Close	Eject / Surround	Recall/Repeat/Tv/ Radio	TV/Radio /
Tv Mute	Shift + Mute / Dimmer	Vol- Tv	Vol-
AV/Input Tv	AV / Input / RDS	<<	<< / Tune-
1	1	>>	>> / Tune+
2	2	I<<	I<< / Preset-
3	3	>>I	>>I / Preset+
PR/CH+ Tv	Shift + CH+ /	Pause/Time Shift	Pause / Step / Freeze
4	4	Play	Play / Slow
5	5	Stop	Stop / Hold
6	6	Home	Menu / Home
PR/CH- Tv	Shift + CH- /	Up	Up
7	7	Info/Menu	Info / Angle
8	8	Left	Left
9	9	Enter	OK
Vol+ Tv	Vol+	Right	Right

Original	Substitut	Original	Substitut
Clear	Shift + Exit / Cancel / Clear	0	0
Recall/Repeat/Tv/ Radio	TV/Radio /	<<	<< / Tune-
Vol- Tv	Vol-	>>	>> / Tune+
<<	<< / Tune-	I<<	I<< / Preset-
>>	>> / Tune+	>>I	>>I / Preset+
Pause/Time Shift	Pause / Step / Freeze	Play	Play / Slow
Stop	Stop / Hold	Home	Menu / Home
Up	Up	Info/Menu	Info / Angle
Left	Left	Enter	OK
Right	Right		





Original	Substitut
Back	Back / Return
Down	Down
Disc Menu/Rec	D.Menu / Top
Guide	Guide / EPG / -/--
PR-	CH- / Page-
PR+	CH+ / Page+
PR List	Smart / List
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
Exit	Exit / Cancel / Clear
Subtitle	Subtitle / EQ
Text	Text / Goto
Mute	Mute / Dimmer
Rec	Rec / Rec Mode
Timer Rec	Shift + Rec / Rec Mode

Original	Substitut
Title/Popup	Setup / OPT /

