

Original	Substitut	Original	Substitut
Power		Power	
Mute		Mute	
CD Play/Pause		Play	
CD Play/Pause		Pause	
CD Stop		Stop	
TAPE Rec		Rec	
CD ICD I<< <<		I<<	
TAPE <<		<<	
TAPE >>		>>	
CD >> >>I		>>I	
D.Skip		List	
SURR		Dual	
Program		Options	
Sleep		Sleep	
Repeat		Text	
TAPE Rev. Play		Left	
TAPE Stop		Ok	
TAPE Play		Right	
Volume+		Vol +	
EQ Patt.		Smart	
Preset+		Ch +	
Volume-		Vol -	
XDSS		Media	
Preset-		Ch -	
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	
8		8	
9		9	
0		0	



Power button (red), MUTE, SHIFT (orange).

TV, DVD, SAT, AUX (PLAY MODE, REC MODE).

PLAY MODE: Play, Pause, Stop, Still.

DISC NAV: Previous, First, Next, Last.

SOUND: LIST, DUAL, AD, SETTINGS.

PROG: SLEEP, TV/R, PICTURE, ECO.

E-MANUAL: REPEAT, ZOOM, 3D, TIMER.

D.MENU, TEXT, AV.

TOP MENU, MENU, DISPLAY, INFO.

OK button with directional pad (Up, Down, Left, Right).

CLEAR, EXIT, RETURN, BACK.

VOL (+, -), CH (+, -).

HOME, SMART, APP, MEDIA.

Numeric keypad (1-9, 0), GUIDE, PRE-CH.

A, B, C, D (colored buttons).

Mandis shop logo and website: www.mandis.tv