



Original	Substitut	Original	Substitut
	Power		Power
	Open/Close		Eject / Surround
	Radio & Input		TV/Radio /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Clear		Exit / Cancel / Clear
	0		0
	Repeat		Shift + Green / APP /
	I<< Skip		I<< / Preset-
	<< Scan		<< / Tune-

Original	Substitut	Original	Substitut
	Scan >>		>> / Tune+
	Skip >>I		>>I / Preset+
	Stop		Stop / Hold
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Speaker Level		Display / Media
	Vol+		Vol+
	Optical		Setup / OPT /
	Sound Effect		Sound / Title
	Vol-		Vol-
	Mute		Mute / Dimmer
	Home		Menu / Home
	Music ID		Audio / Lang I/II
	Info/Display		Info / Angle
	Up/Presets+		Up
	Right/Tuning+		Right
	Left/Tuning-		Left



[illegible]