 






 
 



 



 
 


 
 
 
 

 
 
 
 


 
 

 
 


 
 


 
 
 

 
 
 

 



 

 
 
 



 







Original	Substitut	Original	Substitut
 Power	 Power	 Left	 Left
 Mute	 Mute	 OK	 Ok
 1	 1	 CH+	 Ch +
 2	 2	 CH-	 Ch -
 3	 3	 Vol+	 Vol +
 4	 4	 Vol-	 Vol -
 5	 5	 Red	 Red
 6	 6	 Yellow	 Yellow
 7	 7	 Blue	 Blue
 8	 8	 Green	 Green
 9	 9	 EPG	 Guide
 0	 0	 Subtitle	 Subt
 Menu	 Menu	 TTX	 Text
 Exit	 Exit	 Audio	 Dual
 Up	 Up	 i	 Info
 Down	 Down	 FAV	 Pre Ch
 Right	 Right	 Tv/Radio	 TV/R

Original	Substitut	Original	Substitut
 MUTE	 SHIFT	 TV	 DVD
 TV	 SAT	 AUX	 REC MODE
 PLAY MODE	 II	 SOUND	 AD
 DISC NAV	 LEFT	 SETTINGS	 OPT
 LIST	 DUAL	 PICTURE	 ECO
 PROG	 SEARCH	 FORMAT	 3D
 SLEEP	 TV/R	 ZOOM	 TIMER
 E-MANUAL	 REPEAT	 TEXT	 AV
 D.MENU	 TOP MENU	 DISPLAY	 INFO
 MENU	 OK	CLEAR	RETURN
EXIT	LEFT	HOME	SMART
VOL+	RIGHT	APP	MEDIA
VOL-	DOWN	+ CH	CH-
1	2	3	4
4	5	6	7
7	8	8	9
9	0	GUIDE	0
GUIDE	PRE-CH	A	B
A	C	C	D
B	D	Mandis SHOP	www.mandis.tv





	Original	Substitut	Original	Substitut
		Video		Smart
		Scan		Media
		Device		Options
		File		List
		Zoom		Eject
		Roll		AV
		Record		Rec
		Prev.		I<<
		Next		>>I
		Play		Play
		Pause		Pause
		<<		<<
		>>		>>

