



Original	Substitut	Original	Substitut
Power	Power	0	0
TV / Radio	TV/Radio /	Recall	Back / Return
P.Mode	Picture / Format	Vol+	Vol+
S.Mode	Sound / Title	Mute	Mute / Dimmer
Sleep	Sleep / Timer	CH +	CH+ / Page+
Aspect	Shift + Picture / Format	Vol -	Vol-
1	1	Source	AV / Input / RDS
2	2	CH -	CH- / Page-
3	3	Nicam / Angle	Info / Angle
4	4	Nicam / Angle	Shift + Audio / Lang I/II
5	5	Menu	Menu / Home
6	6	Subtitle	Subtitle / EQ
7	7	i / Display	Display / Media
8	8	Exit	Exit / Cancel / Clear
9	9	Return	Shift + Back / Return
CH List / 10+	Shift + Guide / EPG / -/-	Up	Up
CH List / 10+	Smart / List	Left	Left

Original	Substitut	Original	Substitut
Power	Power	0	0
TV / Radio	TV/Radio /	Recall	Back / Return
P.Mode	Picture / Format	Vol+	Vol+
S.Mode	Sound / Title	Mute	Mute / Dimmer
Sleep	Sleep / Timer	CH +	CH+ / Page+
Aspect	Shift + Picture / Format	Vol -	Vol-
1	1	Source	AV / Input / RDS
2	2	CH -	CH- / Page-
3	3	Nicam / Angle	Info / Angle
4	4	Nicam / Angle	Shift + Audio / Lang I/II
5	5	Menu	Menu / Home
6	6	Subtitle	Subtitle / EQ
7	7	i / Display	Display / Media
8	8	Exit	Exit / Cancel / Clear
9	9	Return	Shift + Back / Return
CH List / 10+	Shift + Guide / EPG / -/-	Up	Up
CH List / 10+	Smart / List	Left	Left





Original	Substitut	Original	Substitut
OK	OK	Stop / FAV	Stop / Hold
Right	Right	[≡i] / Audio / Index	Audio / Lang I/II
Record / Eject	Rec / Rec Mode	I<<	I<< / Preset-
Record / Eject	Eject / Surround	[/≡] / Text	Text / Goto
Down	Down	<< / Cancel	<< / Tune-
EPG / DVD	Setup / OPT /	[≡x] / Cancel	Shift + Exit / Cancel / Clear
EPG / DVD	Guide / EPG / -/--	[≡♦] / Freeze	Shift + Pause / Step /
Red / Goto DVD	Red / Netflix / Search	Size / DVD Title	Zoom / Size
Red / Goto DVD	Shift + Text /	Size / DVD Title	Shift + Sound / Title
Green / Slow DVD	Green / APP / Repeat	>>	>> / Preset+
Yellow / Repeat	Yellow / YouTube / Repeat	[≡+] / Hold	Shift + Stop /
Yellow / Repeat	Shift + Green / APP /	>>	>> / Tune+
Blue / A-B DVD	Blue / Prime Video / Random	[≡?] / Reveal	Shift + OK
Blue / A-B DVD	Shift + Yellow / YouTube /	[≡o] / Subpage / DVD Menu	D.Menu / Top
Play	Play / Slow		
Pause / Timeshift	Pause / Step / Freeze		
Stop / FAV	Fav / Marker / PC		

Original	Substitut	Original	Substitut
Stop / FAV	Stop / Hold	Stop / FAV	Stop / Hold
[≡i] / Audio / Index	Audio / Lang I/II	[≡i] / Audio / Index	Audio / Lang I/II
I<<	I<< / Preset-	I<<	I<< / Preset-
[/≡] / Text	Text / Goto	[/≡] / Text	Text / Goto
<< / Cancel	<< / Tune-	<< / Cancel	<< / Tune-
[≡x] / Cancel	Shift + Exit / Cancel / Clear	[≡x] / Cancel	Shift + Exit / Cancel / Clear
[≡♦] / Freeze	Shift + Pause / Step /	[≡♦] / Freeze	Shift + Pause / Step /
Size / DVD Title	Zoom / Size	Size / DVD Title	Zoom / Size
Size / DVD Title	Shift + Sound / Title	Size / DVD Title	Shift + Sound / Title
>>	>> / Preset+	>>	>> / Preset+
[≡+] / Hold	Shift + Stop /	[≡+] / Hold	Shift + Stop /
>>	>> / Tune+	>>	>> / Tune+
[≡?] / Reveal	Shift + OK	[≡?] / Reveal	Shift + OK
[≡o] / Subpage / DVD Menu	D.Menu / Top	[≡o] / Subpage / DVD Menu	D.Menu / Top

