



Original	Substitut	Original	Substitut
 Power	 Power	 Vol-	 Vol-
 Netflix	 Shift + Red / Netflix /	 i	 Info / Angle
 1	 1	 PR-	 CH- / Page-
 2	 2	 Menu	 Menu / Home
 3	 3	 Up	 Up
 4	 4	 Q.Menu	 D.Menu / Top
 5	 5	 Left	 Left
 6	 6	 OK	 OK
 7	 7	 Right	 Right
 8	 8	 Back	 Back / Return
 9	 9	 Down	 Down
 TV	 TV/Radio /	 EXit	 Exit / Cancel / Clear
 0	 0	 World	 Smart / List
 Recall	 Fav / Marker / PC	 Camera/Music/Ph	 Display / Media
 Vol+	 Vol+	 Guide	 Guide / EPG / -/--
 Mute	 Mute / Dimmer	 */o	 Picture / Format
 PR+	 CH+ / Page+	 Games	 AV / Input / RDS

Original	Substitut	Original	Substitut
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
 www.mandis.tv			





Original	Substitut	Original	Substitut
	[≡]/Text		Text / Goto
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Lang		Audio / Lang I/II
	[≡]..		Subtitle / EQ
	[-O-]		Zoom / Size
	<<		<< / Tune-
	Pause		Pause / Step / Freeze
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	Play		Play / Slow
	Stop		Stop / Hold

