

















 

 
 

 

 


 









Original	Substitut	Original	Substitut
	Power		Power
	Info		Info / Angle
	Mute		Mute / Dimmer
	I - II		Audio / Lang I/II
	Fav		Fav / Marker / PC
	AV / Source		AV / Input / RDS
	TV / DTV		TV/Radio /
	1		1
	2		2
	3		3
	Red / Page+		Red / Netflix / Search
	Red / Page+		Shift + CH+ /
	4		4
	5		5
	6		6
	Green / Page-		Shift + CH- /
	Green / Page-		Green / APP / Repeat

Original	Substitut	Original	Substitut
	7		7
	8		8
	9		9
	Yellow		Yellow / YouTube / Repeat
	-/-- / Exit		Shift + Guide / EPG / -/--
	-/-- / Exit		Exit / Cancel / Clear
	0		0
	M		Menu / Home
	Blue		Blue / Prime Video / Random
	Up		Up
	Left		Left
	OK / Select		OK
	Right		Right
	Down		Down
	P+		CH+ / Page+
	P-		CH- / Page-
	V-		Vol-





Original	Substitut		
	V+		Vol+
	Stop		Stop / Hold
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	LIB		Display / Media
	Rec		Rec / Rec Mode
	<<		<< / Tune-
	>>		>> / Tune+
	Time		Sleep / Timer
	PIP-		l<< / Preset-
	PIP+		>>l / Preset+
	P<P / Swap		Back / Return
	PP		Eject / Surround
	Text		Text / Goto
	Subpage		Subtitle / EQ
	Hold		Shift + Stop /
	Cancel		Shift + Exit / Cancel / Clear

Original	Substitut		
	Size / Wide		Zoom / Size
	Reveal / PIP		Shift + AV / Input / RDS
	Index / Guide		Guide / EPG / -/-
	Mix / PIP		Picture / Format

