

 

 




 



 


 



 

 

 

 




 

 

 













 

 

 



 

 

 



 

 

 

 

 













Original	Substitut	Original	Substitut
 Power	 Power	 CH+	 CH+ / Page+
 Mute	 Mute / Dimmer	 Vol-	 Vol-
 1	 1	 Source	 AV / Input / RDS
 2	 2	 CH-	 CH- / Page-
 3	 3	 Up	 Up
 4	 4	 Left	 Left
 5	 5	 OK	 OK
 6	 6	 Right	 Right
 7	 7	 Exit	 Exit / Cancel / Clear
 8	 8	 Down	 Down
 9	 9	 Menu	 Menu / Home
 CH.List	 Smart / List	 Rec	 Rec / Rec Mode
 0	 0	 Timeshift	 Shift + Pause / Step /
 Recall	 Back / Return	 Timer	 Shift + Sleep / Timer
 Vol+	 Vol+	 Rec.List	 Shift + Smart / List
 PIC.Mode	 Picture / Format	 Red	 Red / Netflix / Search
 S.Mode	 Sound / Title	 Green	 Green / APP / Repeat

Original	Substitut	Original	Substitut
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			





Original	Substitut
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Shift + Picture / Format
	 TV/Radio /
	 Sleep / Timer
	 Subtitle / EQ
	 Info / Angle
	 D.Menu / Top
	 Audio / Lang I/II
	 Display / Media
	 Text / Goto
	 Zoom / Size
	 Play / Slow
	 Pause / Step / Freeze
	 Setup / OPT /
	 Stop / Hold
	 Shift + Stop / Hold

Original	Substitut
	 I<< / Preset-
	 >>I / Preset+
	 << / Tune-
	 >> / Tune+

