



Original	Substitut	Original	Substitut
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	TV / Radio		TV/Radio /
	0		0
	←PR		Back / Return
	EPG		Guide / EPG / -/--
	Up / PR+		Up
	Up / PR+		Shift + Up

Original	Substitut	Original	Substitut
	Menu		Menu / Home
	Left / Vol-		Shift + Left
	Left / Vol-		Left
	OK / List		OK
	OK / List		Shift + OK
	Right / Vol+		Shift + Right
	Right / Vol+		Right
	Info		Info / Angle
	Down / PR-		Shift + Down
	Down / PR-		Down
	Exit		Exit / Cancel / Clear
	Red / Audio		Shift + Red / Netflix /
	Red / Audio		Red / Netflix / Search
	Page+		CH+ / Page+
	Yellow / Subtitle		Shift + Yellow / YouTube /
	Yellow / Subtitle		Yellow / YouTube / Repeat
	Page-		CH- / Page-





Original	Substitut
 Green / TXT	 +  Shift + Green / APP / REPEAT
 Green / TXT	 Green / APP / Repeat
 Pause	 Pause / Step / Freeze
 Blue / L/R	 Blue / Prime Video / Random
 ::	 Text / Goto
 FAV	 Fav / Marker / PC
 UHF	 Setup / OPT /
 PAL / NTSC	 D.Menu / Top
 Record	 Rec / Rec Mode
 Play	 Play / Slow
 Stop	 Stop / Hold
 TV / AV	 AV / Input / RDS
 <<	 << / Tune-
 >>	 >> / Tune+
 < Seek	 Shift + << /
 Seek >	 Shift + >> /

Original	Substitut

