



Original	Substitut	Original	Substitut
 Power	 Power	 Source	 AV / Input / RDS
 Mute	 Mute / Dimmer	 Up	 Up
 1	 1	 Audio / Nicam	 Audio / Lang I/II
 2	 2	 Left	 Left
 3	 3	 OK	 OK
 4	 4	 Right	 Right
 5	 5	 Down	 Down
 6	 6	 Exit	 Exit / Cancel / Clear
 7	 7	 Menu	 Menu / Home
 8	 8	 Vol+	 Vol+
 9	 9	 Mouse On/Off	 D.Menu / Top
 Recall	 Back / Return	 CH+	 CH+ / Page+
 0	 0	 Vol-	 Vol-
 Sleep	 Sleep / Timer	 Home	 Shift + Menu /
	 Shift + 1	 CH-	 CH- / Page-
	 Shift + 2	 P.Mode	 Picture / Format
 CH.List	 Smart / List	 S.Mode	 Sound / Title

Original	Substitut	Original	Substitut
 Power	 Power	 Source	 AV / Input / RDS
 Mute	 Mute / Dimmer	 Up	 Up
 1	 1	 Audio / Nicam	 Audio / Lang I/II
 2	 2	 Left	 Left
 3	 3	 OK	 OK
 4	 4	 Right	 Right
 5	 5	 Down	 Down
 6	 6	 Exit	 Exit / Cancel / Clear
 7	 7	 Menu	 Menu / Home
 8	 8	 Vol+	 Vol+
 9	 9	 Mouse On/Off	 D.Menu / Top
 Recall	 Back / Return	 CH+	 CH+ / Page+
 0	 0	 Vol-	 Vol-
 Sleep	 Sleep / Timer	 Home	 Shift + Menu /
	 Shift + 1	 CH-	 CH- / Page-
	 Shift + 2	 P.Mode	 Picture / Format
 CH.List	 Smart / List	 S.Mode	 Sound / Title



