





 



































 











 









 

 







 







 

 












Original	Substitut	Original	Substitut
 Standby	 Power	 Vol+	 Vol+
 AQT/Auto/Open/CI	 Eject / Surround	 Vol-	 Vol-
 P.Mode	 Picture / Format	 Mute	 Mute / Dimmer
 S.Mode	 Sound / Title	 Audio	 Audio / Lang I/II
 List/Angle	 Smart / List	 Sub-T	 Subtitle / EQ
 Aspect	 Setup / OPT /	 CH+	 CH+ / Page+
 1	 1	 CH-	 CH- / Page-
 2	 2	 Menu	 Menu / Home
 3	 3	 Info	 Info / Angle
 4	 4	 Input	 AV / Input / RDS
 5	 5	 DVD Setup/Exit	 Exit / Cancel / Clear
 6	 6	 Sleep	 Sleep / Timer
 7	 7	 Up	 Up
 8	 8	 Down	 Down
 9	 9	 Right	 Right
 0	 0	 Left	 Left
 Recall	 Back / Return	 OK	 OK

Original	Substitut	Original	Substitut
 Vol+	 Vol+	 Vol+	 Vol+
 Vol-	 Vol-	 Vol-	 Vol-
 Mute	 Mute / Dimmer	 Audio	 Audio / Lang I/II
 Sub-T	 Subtitle / EQ	 CH+	 CH+ / Page+
 CH-	 CH- / Page-	 Menu	 Menu / Home
 Info	 Info / Angle	 Input	 AV / Input / RDS
 DVD Setup/Exit	 Exit / Cancel / Clear	 Sleep	 Sleep / Timer
 Up	 Up	 Down	 Down
 Down	 Down	 Right	 Right
 Right	 Right	 Left	 Left
 Left	 Left	 OK	 OK





Original	Substitut	Original	Substitut
 Standby	 Power	 Vol+	 Vol+
 AQT/Auto/Open/CI	 Eject / Surround	 Vol-	 Vol-
 P.Mode	 Picture / Format	 Mute	 Mute / Dimmer
 S.Mode	 Sound / Title	 Audio	 Audio / Lang I/II
 List/Angle	 Smart / List	 Sub-T	 Subtitle / EQ
 Aspect	 Setup / OPT /	 CH+	 CH+ / Page+
 1	 1	 CH-	 CH- / Page-
 2	 2	 Menu	 Menu / Home
 3	 3	 Info	 Info / Angle
 4	 4	 Input	 AV / Input / RDS
 5	 5	 DVD Setup/Exit	 Exit / Cancel / Clear
 6	 6	 Sleep	 Sleep / Timer
 7	 7	 Up	 Up
 8	 8	 Down	 Down
 9	 9	 Right	 Right
 0	 0	 Left	 Left
 Recall	 Back / Return	 OK	 OK

Original	Substitut	Original	Substitut
 Vol+	 Vol+	 TV	 DVD
 Vol-	 Vol-	 SAT	 AUX
 Mute	 Mute / Dimmer	 SLOW	 STEP-FREEZE
 Audio	 Audio / Lang I/II	 HOLD	 REC MODE
 Sub-T	 Subtitle / EQ	 TUNE-	 TUNE+
 CH+	 CH+ / Page+	 PRESET-	 PRESET+
 CH-	 CH- / Page-	 TITLE	 LANG I/II
 Menu	 Menu / Home	 EQ	 SURROUND
 Info	 Info / Angle	 SOUND	 AUDIO
 Input	 AV / Input / RDS	 SUBTITLE	 TIMER
 DVD Setup/Exit	 Exit / Cancel / Clear	 PICTURE	 ZOOM
 Sleep	 Sleep / Timer	 FORMAT	 SIZE
 Up	 Up	 SLEEP	 PROGRAM
 Down	 Down	 TOP MENU	 OPT-TOOLS
 Right	 Right	 GOTO	 RDS
 Left	 Left	 D.MENU	 SETUP
 OK	 OK	 TEXT	 AV INPUT



