



 

 

 



 

 

 



 



 





 






















 




 



 

 

 





| Original | Substitut | Original | Substitut |
|--|--|--|---|
|  POWER |  Power |  REPEAT/GREEN/▼ |  Green / APP / Repeat |
|  INFO |  Info / Angle |  7 |  7 |
|  HDMI CONTROL |  Smart / List |  8 |  8 |
|  SLEEP |  Sleep / Timer |  9 |  9 |
|  SCREEN |  Picture / Format |  ROOT/YELLOW |  Yellow / YouTube / Repeat |
|  SOURCE |  AV / Input / RDS |  RETURN |  Back / Return |
|  PRESETS |  Setup / OPT / |  0 |  0 |
|  1 |  1 |  MENU |  Menu / Home |
|  2 |  2 |  TITLE/BUE |  Sound / Title |
|  3 |  3 |  TITLE/BUE |  Blue / Prime Video / Random |
|  ZOOM/RED/▲ |  Zoom / Size |  UP |  Up |
|  ZOOM/RED/▲ |  SHIFT + CH+ / |  LEFT |  Left |
|  ZOOM/RED/▲ |  Red / Netflix / Search |  OK/SELECT |  OK |
|  4 |  4 |  RIGHT |  Right |
|  5 |  5 |  DOWN |  Down |
|  6 |  6 |  P+ |  CH+ / Page+ |
|  REPEAT/GREEN/▼ |  SHIFT + CH- / |  P- |  CH- / Page- |

Page-





| Original | Substitut | Original | Substitut |
|----------|-------------|----------|-------------------------|
| | V- | | Vol- |
| | V+ | | Vol+ |
| | FAV | | Fav / Marker / PC |
| | LANG | | Audio / Lang I/II |
| | SUBTITLE | | Subtitle / EQ |
| | MUTE | | Mute / Dimmer |
| | SWAP/↔ | | Shift + Back / Return |
| | EPG | | Guide / EPG / -/-- |
| | [*] / [..] | | D.Menu / Top |
| | TEXT | | Text / Goto |
| | C | | Exit / Cancel / Clear |
| | DISPLAY | | Display / Media |
| | ANGLE | | Shift + Info / Angle |
| | SEARCH MODE | | Shift + Red / Netflix / |
| | REC | | Rec / Rec Mode |
| | STOP | | Stop / Hold |
| | PLAY | | Play / Slow |

| Original | Substitut | Original | Substitut |
|---------------|-----------|----------|-----------------------|
| | PAUSE | | Pause / Step / Freeze |
| << button"/> | << | | << / Tune- |
| >> button"/> | >> | | >> / Tune+ |
| | I<< | | I<< / Preset- |
| >>I button"/> | >>I | | >>I / Preset+ |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

