



Original	Substitut	Original	Substitut
	Power		Power
	PP		Pre Ch
	Mute		Mute
	I-II		Dual
	P<P		Back
	-/--		Guide
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Vol +		Vol +

Original	Substitut	Original	Substitut
	Vol -		Vol -
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	M		Ok
	PR+		Ch +
	PR-		Ch -
	M		Menu
	Red/ Sound		Red
	Green/ Picture		Green
	Yellow/ Feature		Yellow
	Blue/ Install		Blue
	TV		TV/ R
	AV		AV
	[≡]		Text
	[≡]		Smart



