
















































 














Original	Substitut	Original	Substitut
 Power	 Power	 CH- / PAGE	 CH- / Page-
 CBL/SAT	 0	 MUTE	 Mute / Dimmer
 Media Player	 Guide / EPG / -/--	 Volume-	 Vol-
 Blu-ray/DVD	 2	 Info	 Info / Angle
 Game	 Fav / Marker / PC	 Option	 Menu / Home
 AUX	 7	 Up	 Up
 Tuner	 6	 Left	 Left
 Phono	 5	 Enter	 OK
 TV Audio	 1	 Right	 Right
 CD	 3	 Back	 Back / Return
 USB	 8	 Down	 Down
 Bluetooth	 9	 Setup	 Setup / OPT /
 Internet Radio	 4	 I<</Tune-	 I<< / Preset-
 Heos	 Smart / List	 I<</Tune-	 << / Tune-
 CH+	 CH+ / Page+	 Play/Pause	 Play / Slow
 ECO	 Zoom / Size	 >>I/Tune+	 >>I / Preset+
 Volume+	 Vol+	 >>I/Tune+	 >> / Tune+



 








 








 



 



























 








 



Original	Substitut
	Band
	Stop/Mode
	Memory
	Smart Select 1
	Smart Select 2
	Smart Select 3
	Smart Select 4
	Speaker
	Sleep
	Dimmer
	Sound Mode
	Display / Media
	Stop / Hold
	Eject / Surround
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Subtitle / EQ
	Sleep / Timer
	Shift + Mute / Dimmer
	Sound / Title

Original	Substitut



 









Original	Substitut
 Power	 Power
 CBL/SAT	 0
 Media Player	 Guide / EPG / -/--
 Blu-ray/DVD	 2
 Game	 Fav / Marker / PC
 AUX	 7
 Tuner	 6
 Phono	 5
 TV Audio	 1
 CD	 3
 USB	 8
 Bluetooth	 9
 Internet Radio	 4
 Heos	 Smart / List
 CH+	 CH+ / Page+
 Volume+	 Vol+
 CH-	 CH- / Page-

Original	Substitut
 Mute	 Mute / Dimmer
 Volume-	 Vol-
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Back	 Back / Return
 Down	 Down
 I<</Tune-	 I<< / Preset-
 I<</Tune-	 << / Tune-
 Play/Pause	 Play / Slow
 >>I/Tune+	 >>I / Preset+
 >>I/Tune+	 >> / Tune+
 Band	 Display / Media
 Stop/Mode	 Stop / Hold
 Memory	 Eject / Surround
 Smart Select 1	 Red / Netflix / Search





	Original	Substitut	Original	Substitut
	Smart Select 2	 Green / APP / Repeat		
	Smart Select 3	 Yellow / YouTube / Repeat		
	Smart Select 4	 Blue / Prime Video / Random		
	Sleep	 Sleep / Timer		

