 

















 
















 


 









Original	Substitut
	 Power
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 0
	 AV / Input / RDS
	 Zoom / Size
	 Subtitle / EQ
	 Audio / Lang I/II
	 Shift + Info / Angle
	 Setup / OPT /

Original	Substitut
	 Display / Media
	 Smart / List
	 Mute / Dimmer
	 Info / Angle
	 Back / Return
	 CH+ / Page+
	 Up
	 Vol-
	 Left
	 OK
	 Right
	 Vol+
	 Down
	 CH- / Page-
	 Guide / EPG / -/--
	 D.Menu / Top
	 Text / Goto



 

















 




















Original	Substitut	Original	Substitut
	TXT/Menu		Menu / Home
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	[<>]		Shift + Zoom /
	Rec/l>		Rec / Rec Mode
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	I<		I<< / Preset-
	>I		>>I / Preset+
	<<		<< / Tune-
	>>		>> / Tune+







Original	Substitut
	 Power
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 0
	 AV / Input / RDS
	 Zoom / Size
	 Subtitle / EQ
	 Audio / Lang I/II
	 Shift + Info / Angle
	 Setup / OPT /

Original	Substitut
	 Display / Media
	 Smart / List
	 Mute / Dimmer
	 Info / Angle
	 Back / Return
	 CH+ / Page+
	 Up
	 Vol-
	 Left
	 OK
	 Right
	 Vol+
	 Down
	 CH- / Page-
	 Guide / EPG / -/--
	 D.Menu / Top
	 Menu / Home



 

















 




















 

 



Original	Substitut	Original	Substitut
	TXT/Menu		Text / Goto
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	[<>]		Shift + Zoom /
	Rec/l>		Rec / Rec Mode
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	I<		I<< / Preset-
	>I		>>I / Preset+
	<<		<< / Tune-
	>>		>> / Tune+







Original	Substitut
	 Power
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 0
	 AV / Input / RDS
	 Zoom / Size
	 Subtitle / EQ
	 Audio / Lang I/II
	 Shift + Info / Angle
	 Setup / OPT /

Original	Substitut
	 Display / Media
	 Smart / List
	 Mute / Dimmer
	 Info / Angle
	 Back / Return
	 CH+ / Page+
	 Up
	 Vol-
	 Left
	 OK
	 Right
	 Vol+
	 Down
	 CH- / Page-
	 Guide / EPG / -/--
	 D.Menu / Top
	 Text / Goto



 

















 


















 


 





	Original	Substitut	Original	Substitut
	TXT/Menu	Menu / Home		
	Red	Red / Netflix / Search		
	Green	Green / APP / Repeat		
	Yellow	Yellow / YouTube / Repeat		
	Blue	Blue / Prime Video / Random		
	[<>]	Shift + Zoom /		
	Rec/l>	Rec / Rec Mode		
	Play	Play / Slow		
	Pause	Pause / Step / Freeze		
	Stop	Stop / Hold		
	I<	I<< / Preset-		
	>I	>>I / Preset+		
	<<	<< / Tune-		
	>>	>> / Tune+		







Original	Substitut
	 Power
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 0
	 AV / Input / RDS
	 Zoom / Size
	 Subtitle / EQ
	 Audio / Lang I/II
	 Shift + Info / Angle
	 Setup / OPT /

Original	Substitut
	 Display / Media
	 Smart / List
	 Mute / Dimmer
	 Info / Angle
	 Back / Return
	 CH+ / Page+
	 Up
	 Vol-
	 Left
	 OK
	 Right
	 Vol+
	 Down
	 CH- / Page-
	 Guide / EPG / -/--
	 D.Menu / Top
	 Text / Goto





Original	Substitut	Original	Substitut
	TXT/Menu		Menu / Home
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	[<>]		Shift + Zoom /
	Rec/l>		Rec / Rec Mode
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	I<		I<< / Preset-
	>I		>>I / Preset+
	<<		<< / Tune-
	>>		>> / Tune+

