




 
 

 



 



 



 


 



 

 
 


 
 

 








Original	Substitut	Original	Substitut
 Power	 Power	 Right	 Right
 Mute	 Mute	 Down	 Down
 Eject / Nicam	 Eject	 Left	 Left
 Recall / Goto	 Pre Ch	 Enter	 Ok
 1	 1	 DVD/DVB Menu	 D. Menu
 2	 2	 Exit	 Exit
 3	 3	 Vol +	 Vol +
 4	 4	 Vol -	 Vol -
 5	 5	 Sound	 Shift + Dual
 6	 6	 PIC	 Shift + Format
 7	 7	 CH +	 Ch +
 8	 8	 CH -	 Ch -
 9	 9	 Sleep	 Sleep
 0	 0	 Aspect	 Format
 TV Menu	 Menu	 Rad / DVD	 Options
 Source	 AV	 Recall / TV	 Back
 Up	 Up	 Text	 Text

Original	Substitut	Original	Substitut
 MUTE	 MUTE	 TV	 AUX
 DVD	 SAT	 PLAY MODE	 REC MODE
 SAT	 AUX	 FF	 FF
 AUX	 STOP	 PAUSE	 PAUSE
 TV	 STOP	 PLAY	 PLAY
 DVD	 STOP	 FR	 FR
 SAT	 STOP	 REVERSE	 REVERSE
 AUX	 STOP	 LIST	 LIST
 TV	 STOP	 SOUND	 SOUND
 DVD	 STOP	 AD	 AD
 SAT	 STOP	 SETTINGS	 SETTINGS
 AUX	 STOP	 DUAL	 DUAL
 TV	 STOP	 SUBT	 SUBT
 DVD	 STOP	 OPT	 OPT
 SAT	 STOP	 ECO	 ECO
 AUX	 STOP	 3D	 3D
 TV	 STOP	 TIMER	 TIMER
 DVD	 STOP	AV	AV
SAT	STOP	TEXT	TEXT
AUX	STOP	REPEAT	REPEAT





Original	Substitut
Play/Pause / Info	Info
Play/Pause / Info	Play
Play/Pause / Info	Pause
Stop / FAV	Shift + Pre Ch
Stop / FAV	Stop
EPG	Guide
Red / DVD/USB	Red
Green / Title	Green
Yellow / PBC	Yellow
Blue / Angle	Blue
<< / Reveal	<<
>> / Hold	>>
I<< / List	I<<
>>I / Index	>>I
Subpage	Media
Display	Shift + Info
Audio	Dual

Original	Substitut
Subtitle	Subt

