



Original	Substitut	Original	Substitut
 Power	 Power	 USB	 AV
 Mute	 Mute	 Menu	 Menu
 1	 1	 EPG	 Guide
 2	 2	 Exit	 Exit
 3	 3	 Goto	 Smart
 4	 4	 Play	 Play
 5	 5	 Pause	 Pause
 6	 6	 <<	 <<
 7	 7	 >>	 >>
 8	 8	 Rec	 Rec
 9	 9	 Stop	 Stop
 0	 0	 UP	 Up
 Info	 Info	 Down	 Down
 FAV	 Pre Ch	 Right	 Right
 Page+	 >>	 Left	 Left
 Page-	 <<	 OK	 Ok
 Audio	 Dual	 CH+	 Ch +

Original	Substitut	Original	Substitut
 MUTE	 MUTE	 TV	 AUX
 DVD	 SAT	 PLAY MODE	 REC MODE
 SAT	 AUX	 <<	 <<
 AUX	 TV	 >>	 >>
 TV	 DVD	 DISC NAV	 SOUND
 DVD	 SAT	 LIST	 SUBT
 SAT	 AUX	 PROG	 PICTURE
 AUX	 TV	 SLEEP	 TV/R
 TV	 DVD	 E-MANUAL	 REPEAT
 DVD	 SAT	 D.MENU	 TEXT
 SAT	 AUX	 TOP MENU	 DISPLAY
 AUX	 TV	 MENU	 INFO
 TV	 DVD	 OK	 OK
 DVD	 SAT	 EXIT	 RETURN
 SAT	 AUX	 +	 +
 AUX	 TV	 -	 -
 TV	 DVD	 1	 2
 DVD	 SAT	 4	 5
 SAT	 AUX	 7	 8
 AUX	 TV	 9	 0
 TV	 DVD	GUIDE	PRE-CH
 DVD	 SAT	A	B
 SAT	 AUX	C	D
 AUX	 TV	Mandis SHOP	www.mandis.tv





Original	Substitut	Original	Substitut
CH-	Ch -		
Vol+	Vol +		
Vol-	Vol -		
TV/Radio	TV/R		
Teletext	Text		
Subtitle	Subt		
Recall	Back		
Red	Red		
Green	Green		
Yellow	Yellow		
Blue	Blue		

