



 






 

 

















 






Original	Substitut
 Standby	 Power
 Tv/Radio	 TV/R
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Goto	 Smart
 Favourite	 Pre Ch
 Menu	 Menu
 Info	 Info

Original	Substitut
 Recall	 Back
 Exit	 Exit
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 CH+	 Ch +
 CH-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 EPG	 Guide
 Subtitle	 Subt
 Audio	 Dual
 TTX	 Text
 <<	 <<
 >>	 >>





	Original	Substitut	Original	Substitut
	I<<			I<<
PREV				
	>>I			>>I
NEXT				
	Play			Play
PLAY				
	Pause			Pause
PAUSE				
	Stop			Stop
STOP				
	Rec			Rec
REC				
	Repeat	 + 		Shift + Text
REPEAT				
	Page+	 + 		Shift + Ch +
PAGE+				
	Page-	 + 		Shift + Ch -
PAGE-				
	PVR			Media
PVR				
	Red/USB			Red
USB				
	Green/V-Format			Green
V-FORMAT				
	Yellow/Aspect			Yellow
ASPECT				
	Blue/Timer			Blue
TIMER				

