



Original	Substitut	Original	Substitut
	Power		Power
	Mute		Mute / Dimmer
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Rec		Rec / Rec Mode
	<<		<< / Tune-
	>>		>> / Tune+
	Lang		Audio / Lang I/II
	[=] .		Subtitle / EQ
	*1		Picture / Format
	Text		Text / Goto
	Google Play		Shift + Green / APP / REPEAT
	Source		AV / Input / RDS
	Menu		Menu / Home
	Up		Up
	i		Info / Angle

Original	Substitut	Original	Substitut
	Left		Left
	OK		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	←		Back / Return
	V+		Vol+
	P+		CH+ / Page+
	V-		Vol-
	P-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7





Original	Substitut
	8
	9
	[G]
	0
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Shift + HOME MENU / Menu /
	Shift + RED NETFLIX SEARCH / Shift + Red / Netflix /
	Shift + YELLOW YOUTUBE REPEAT A-B / Shift + Yellow / YouTube /
	Shift + BLUE PRIME VIDEO RANDOM / Shift + Blue / Prime

Original	Substitut

