



Original	Substitut
Power	Power
Netflix	+ SEARCH Shift + Red / Netflix /
1	1 1
2	2 2
3	3 3
4	4 4
5	5 5
6	6 6
7	7 7
8	8 8
9	9 9
TV	TV/Radio /
0	0 0
Recall	Fav / Marker / PC
Vol+	Vol+
Mute	Mute / Dimmer
PR+	CH+ / Page+

Original	Substitut
Vol-	Vol-
i	Info / Angle
PR-	CH- / Page-
Menu	Menu / Home
Up	Up
Q.Menu	D.Menu / Top
Left	Left
OK	OK
Right	Right
Back	Back / Return
Down	Down
EXit	Exit / Cancel / Clear
World	Smart / List
Camera/Music/Ph	Display / Media
Guide	Guide / EPG / -/--
*/o	Picture / Format
Games	AV / Input / RDS





Original	Substitut	Original	Substitut
[≡]/Text	Text / Goto		
Red	Red / Netflix / Search		
Green	Green / APP / Repeat		
Yellow	Yellow / YouTube / Repeat		
Blue	Blue / Prime Video / Random		
Lang	Audio / Lang I/II		
[≡]..	Subtitle / EQ		
[-O-]	Zoom / Size		
<<	<< / Tune-		
Pause	Pause / Step / Freeze		
>>	>> / Tune+		
Rec	Rec / Rec Mode		
Play	Play / Slow		
Stop	Stop / Hold		

