













 

 



 

 



 

 

 





 





Original	Substitut	Original	Substitut
	POWER		Power
	INFO		Info / Angle
	MUTE		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	SOURCE		AV / Input / RDS
	0		0
	AUDIO		Audio / Lang I/II
	FORMAT		Picture / Format
	BACK		Back / Return

Original	Substitut	Original	Substitut
	MENU		Menu / Home
	EXIT		Exit / Cancel / Clear
	UP		Up
	LEFT		Left
	ENTER		OK
	RIGHT		Right
	VOL+		Vol+
	DOWN		Down
	CH+		CH+ / Page+
	VOL-		Vol-
	CH-		CH- / Page-
	LIST		Smart / List
	SLEEP		Sleep / Timer
	EPG		Guide / EPG / -/-
	FAV		Fav / Marker / PC
	<<		<< / Tune-
	RED		Red / Netflix / Search





	Original	Substitut	Original	Substitut
		TUNE+ >> / Tune+		
		APP REPEAT Green / APP / Repeat		
		PRESET- I<< / Preset-		
		YouTube REPEAT A-B Yellow / YouTube / Repeat		
		Prime Video RANDOM Blue / Prime Video / Random		
		PRESET+ >>I / Preset+		
		SLOW Play / Slow		
		STEP - FREEZE Pause / Step / Freeze		
		GOTO TEXT Text / Goto		
		HOLD Stop / Hold		
		EQ SUBTITLE Subtitle / EQ		
		PROGRAM TV / RADIO TV/Radio /		
		OPT-TOOLS SETUP Setup / OPT /		
		MEDIA DISPLAY Display / Media		
		TOP MENU D.MENU D.Menu / Top		
		REC MODE Rec / Rec Mode		

