






| Original | Substitut | Original | Substitut |
|---|---|---|---|
|  Power |  Power |  Rec |  Rec / Rec Mode |
|  Tv/Radio |  TV/Radio / |  Stop |  Stop / Hold |
|  Red |  Red / Netflix / Search |  I<< |  I<< / Preset- |
|  Green |  Green / APP / Repeat |  FAV |  Fav / Marker / PC |
|  Yellow |  Yellow / YouTube / Repeat |  >>I/Index |  >>I / Preset+ |
|  Blue |  Blue / Prime Video / Random |  Menu |  Menu / Home |
|  Subtitle |  Subtitle / EQ |  Up |  Up |
|  Text |  Text / Goto |  Source |  AV / Input / RDS |
|  Hold |  Shift + Stop / |  Left |  Left |
|  TVG |  Guide / EPG / -/-- |  OK |  OK |
|  Audio |  Audio / Lang I/II |  Right |  Right |
|  Play |  Play / Slow |  Down |  Down |
|  Pause |  Pause / Step / Freeze |  Exit |  Exit / Cancel / Clear |
|  Size |  Zoom / Size |  Aspect |  Picture / Format |
|  << |  << / Tune- |  Vol+ |  Vol+ |
|  Subpage |  Eject / Surround |  Mute |  Mute / Dimmer |
|  >> |  >> / Tune+ |  CH+ |  CH+ / Page+ |



