





 

 









 



 









 


 

 


 

 












 

 










 
 
 





 

 





Original	Substitut	Original	Substitut
	Power		Power
	Mute		Mute / Dimmer
	Aspect		Shift + Picture / Format
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	Audio / Nicam		Audio / Lang I/II
	Sleep		Sleep / Timer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Up		Up
	Menu		Menu / Home
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	Vol +		Vol+
	Exit		Exit / Cancel / Clear
	CH +		CH+ / Page+
	Vol -		Vol-
	Shift + Guide / EPG / -/--		Shift + Guide / EPG / -/--
	Back / Return		Back / Return
	Red / Netflix / Search		Red / Netflix / Search
	Green / APP / Repeat		Green / APP / Repeat
	Yellow / YouTube / Repeat		Yellow / YouTube / Repeat
	Blue / Prime Video / Random		Blue / Prime Video / Random
	AV / Input / RDS		AV / Input / RDS





Original	Substitut
 Display	 Display / Media
 CH -	 CH- / Page-
 TXT	 Text / Goto
 Index	 Setup / OPT /
 Hold	 Shift + Stop /
 Mix	 Shift + Text /
 Subpage	 Eject / Surround
 Reveal / Subtitle	 Subtitle / EQ
 Size	 Zoom / Size
 Rec / Goto /	 Rec / Rec Mode
 EPG	 Guide / EPG / -/--
 List	 Smart / List
 TV / Radio	 TV/Radio /
 FAV	 Fav / Marker / PC
 Play / Pause	 Play / Slow
 Play / Pause	 Shift + Play /
 Stop	 Stop / Hold

Original	Substitut
 PVR Menu	 D.Menu / Top
 Media	 Shift + Display / Media
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 <<	 << / Tune-
 >>	 >> / Tune+

