








 









 











Original	Substitut	Original	Substitut
 Standby	 Power	 Setup	 Setup / OPT /
 Mute	 Mute / Dimmer	 Menu	 Menu / Home
 Play	 Play / Slow	 Up	 Up
 Pause	 Pause / Step / Freeze	 Angle	 Info / Angle
 Stop	 Stop / Hold	 Left	 Left
 <</Rev	 << / Tune-	 Enter	 OK
 >>/Fwd	 >> / Tune+	 Right	 Right
 I<</Prev	 I<< / Preset-	 Down	 Down
 >>I/Next	 >>I / Preset+	 Return	 Back / Return
 Title	 Sound / Title	 Vol+	 Vol+
 Language	 Audio / Lang I/II	 N/P	 Smart / List
 Subtitle	 Subtitle / EQ	 Vol-	 Vol-
 Open/Close	 Eject / Surround	 Display	 Display / Media
 Mode	 Picture / Format	 1	 1
 Zoom	 Zoom / Size	 2	 2
 Time	 Sleep / Timer	 3	 3
 Prog	 TV/Radio /	 4	 4

Original	Substitut	Original	Substitut
 Setup	 Setup / OPT /	 Setup	 Setup / OPT /
 Menu	 Menu / Home	 Menu	 Menu / Home
 Up	 Up	 Up	 Up
 Angle	 Info / Angle	 Angle	 Info / Angle
 Left	 Left	 Left	 Left
 Enter	 OK	 Enter	 OK
 Right	 Right	 Right	 Right
 Down	 Down	 Down	 Down
 Return	 Back / Return	 Return	 Back / Return
 Vol+	 Vol+	 Vol+	 Vol+
 N/P	 Smart / List	 N/P	 Smart / List
 Vol-	 Vol-	 Vol-	 Vol-
 Display	 Display / Media	 Display	 Display / Media
 1	 1	 1	 1
 2	 2	 2	 2
 3	 3	 3	 3
 4	 4	 4	 4



