










 

 

 




 
 










 




 










 






 

 



 


 
 

 








Original	Substitut	Original	Substitut
 Standby	 Power	 TV / Radio	 TV/R
 Mute	 Mute	 Menu	 Menu
 1	 1	 Exit	 Exit
 2	 2	 Up	 Up
 3	 3	 Right	 Right
 4	 4	 Down	 Down
 5	 5	 Left	 Left
 6	 6	 OK	 Ok
 7	 7	 Record	 Rec
 8	 8	 Stop	 Stop
 9	 9	 Vol +	 Vol +
 0	 0	 Vol -	 Vol -
 Info	 Info	 TTX	 Text
 Recall	 Back	 FAV	 Pre Ch
 EPG	 Guide	 CH +	 Ch +
 Audio	 Dual	 CH -	 Ch -
 Subtitle	 Subt	 Media	 Media

Original	Substitut	Original	Substitut
 TV	 DVD	 SAT	 AUX
 PLAY MODE	 REC MODE	 TV	 DUAL
 SOUND	 AD	 SETTINGS	 OPT
 DISC NAV	 PICTURE	 ECO	 3D
 LIST	 SLEEP	 E-MANUAL	 D.MENU
 PROG	 REPEAT	 ZOOM	 TIMER
 SEARCH	 TEXT	 AV	
 TOP MENU	 DISPLAY	 MENU	 INFO
 EXIT	 RETURN	 OK	 BACK
 CLEAR	 HOME	 SMART	 CH +
 EXIT	 APP	 MEDIA	 CH -
 VOL +	 HOME	 SMART	 CH +
 VOL -	 APP	 MEDIA	 CH -
 1	 2	 3	
 4	 5	 6	
 7	 8	 9	
 GUIDE	 0	 FAV	 PRE-CH
 A	 B	 C	 D
			
www.mandis.tv			





	Original	Substitut		Original	Substitut
	I<< Prev		I<<		
	Play		Play		
	<< Rew		<<		
	USB		Smart		
	>> Next		>>		
	Pause		Pause		
	>> Fwd		>>		
	Red		Red		
	Green		Green		
	Yellow		Yellow		
	Blue		Blue		

	Original	Substitut		Original	Substitut

