

 



 

 

 

 

 

 



 

 

 

 

 









| Original  | Substitut   |
|---|---|
|    |  Power                       |
|    |  Red / Netflix / Search      |
|    |  Green / APP / Repeat        |
|    |  Yellow / YouTube / Repeat   |
|    |  Blue / Prime Video / Random |
|    |  Option / Setup / OPT /      |
|    |  [ I ] / Info / Angle        |
|    |  Up                          |
|    |  Left                        |
|    |  OK                          |
|    |  Right                       |
|   |  Down                       |
|  |  Menu/Browse / Menu / Home |
|  |  [ = ] / Text / Goto       |
|  |  Vol+                      |
|  |  P+ / CH+ / Page+          |
|  |  Vol-                      |

| Original  | Substitut  |
|---|--|
|    |  Mute / Dimmer              |
|    |  P- / CH- / Page-           |
|    |  1                          |
|    |  2                          |
|    |  3                          |
|    |  4                          |
|    |  5                          |
|    |  6                          |
|    |  7                          |
|    |  8                          |
|    |  9                          |
|   |  AV / Input / RDS          |
|  |  0                        |
|  |  P<P / Back / Return      |
|  |  Ambilight / Smart / List |
|  |  Mode / D.Menu / Top      |
|  |  << / Tune-               |



