


 



























 
 













































Original	Substitut	Original	Substitut
Audio Off	 Mute / Dimmer	Rep/A-B	 Yellow / YouTube / Repeat
Game	 Blue / Prime Video / Random	Rewind	 << / Tune-
Pbc	 AV / Input / RDS	Repeat/1/All	 Green / APP / Repeat
Digest	 Text / Goto	Prev.	 I<< / Preset-
C/CH	 Sleep / Timer	F.Forward	 >> / Tune+
Auto/Track	 Picture / Format	3	 3
DVD/TV	 Smart / List	4	 4
3D	 +  Shift + 3	5	 5
Menu Down	 Down	6	 6
Slow Down	 CH- / Page-	7	 7
Slow Up	 CH+ / Page+	8	 8
OK Enter	 OK	9	 9
Menu Up	 Up	+10	 Guide / EPG / -/--
Progr.	 TV/Radio /	0	 0
Menu Right	 Right	1	 1
2	 2	Angle	 Info / Angle
Menu Left	 Left	Play	 Play / Slow

Original	Substitut	Original	Substitut
Rep/A-B	 Yellow / YouTube / Repeat	Rep/A-B	 Yellow / YouTube / Repeat
Rewind	 << / Tune-	Rewind	 << / Tune-
Repeat/1/All	 Green / APP / Repeat	Repeat/1/All	 Green / APP / Repeat
Prev.	 I<< / Preset-	Prev.	 I<< / Preset-
F.Forward	 >> / Tune+	F.Forward	 >> / Tune+
3	 3	3	 3
4	 4	4	 4
5	 5	5	 5
6	 6	6	 6
7	 7	7	 7
8	 8	8	 8
9	 9	9	 9
+10	 Guide / EPG / -/--	+10	 Guide / EPG / -/--
0	 0	0	 0
1	 1	1	 1
Angle	 Info / Angle	Angle	 Info / Angle
Play	 Play / Slow	Play	 Play / Slow



Original	Substitut	Original	Substitut
Record	 Rec / Rec Mode		
Audio	 Audio / Lang I/II		
Setup	 Setup / OPT /		
Mark	 Fav / Marker / PC		
Open/Close	 Eject / Surround		
Menu	 Menu / Home		
Stop	 Stop / Hold		
Pause	 Pause / Step / Freeze		
Subt.	 Subtitle / EQ		
Title	 Sound / Title		
Zoom	 Zoom / Size		
On/Off	 Power		
Display	 Display / Media		
Return	 Back / Return		
Next	 >>I / Preset+		
Top Menu	 D.Menu / Top		

