 

 

 

 

 

 

 

 
 
 

 



 

 

 

 

 



 




| Original | Substitut |
|---|---|
|  Power |  Power |
|  Off Timer |  Sleep / Timer |
|  TV Input |  TV/Radio / |
|  AV Input |  AV / Input / RDS |
|  Menu |  Menu / Home |
|  Text |  Text / Goto |
|  STTL |  Subtitle / EQ |
|  Aspect |  Picture / Format |
|  Info |  Info / Angle |
|  Exit |  Exit / Cancel / Clear |
|  Home |  Shift + Home / Menu / |
|  APPS |  Shift + Green / APP / |
|  Up |  Up |
|  Guide |  Guide / EPG / -/- |
|  Left |  Left |
|  OK |  OK |
|  Right |  Right |

| Original | Substitut |
|---|---|
|  Option |  Setup / OPT / |
|  Down |  Down |
|  Back/Return |  Back / Return |
|  Red |  Red / Netflix / Search |
|  Green |  Green / APP / Repeat |
|  Yellow |  Yellow / YouTube / Repeat |
|  Blue |  Blue / Prime Video / Random |
|  Vol+ |  Vol+ |
|  Mute |  Mute / Dimmer |
|  CH+ |  CH+ / Page+ |
|  Vol- |  Vol- |
|  CH- |  CH- / Page- |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |





| Original | | Substitut | | Original | Substitut |
|----------|------------------|-----------------|-----------------------|----------|-----------|
| 6mno | 6 | TUNER 6 | 6 | | |
| 7pqrs | 7 | AUX - HDD 7 | 7 | | |
| 8tuv | 8 | USB 8 | 8 | | |
| 9wxyz | 9 | BLUETOOTH 9 | 9 | | |
| ? | Help/? | LIST SMART | Smart / List | | |
| 0 | 0 | HDMI - BAT 0 | 0 | | |
| ↻ | Last View/Recall | PC FAV MARKER | Fav / Marker / PC | | |
| ⏪ | << | TUNE- ⏪ | << / Tune- | | |
| ▶ | Play | SLOW ▶ | Play / Slow | | |
| ⏩ | >> | TUNE+ ⏩ | >> / Tune+ | | |
| ⏮ | << | PRESET- ⏮ | << / Preset- | | |
| ⏹ | Pause | STEP - FREEZE ⏹ | Pause / Step / Freeze | | |
| ⏭ | >> | PRESET+ ⏭ | >> / Preset+ | | |
| ■ | Stop | HOLD ■ | Stop / Hold | | |
| ● | Rec | REC MODE ● | Rec / Rec Mode | | |

