




Original	Substitut
 Power	 Power
 Input TV	 TV/Radio /
 Input Av	 AV / Input / RDS
 Guide	 Guide / EPG / -/--
 Up	 Up
 Exit	 Exit / Cancel / Clear
 Left	 Left
 OK	 OK
 Right	 Right
 Menu	 Menu / Home
 Down	 Down
 Return	 Back / Return
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 [+]/Aspect	 Picture / Format

Original	Substitut
 Link Vieta	 Smart / List
 Option	 Setup / OPT /
 Direct Tv Rec	 Shift + Rec / Rec Mode
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 i	 Info / Angle
 0/VCR	 0
 0/VCR	 Shift + 4
 Mute	 Mute / Dimmer
 CH+	 CH+ / Page+





Original	Substitut
Vol+	Vol+
CH-	CH- / Page-
Vol-	Vol-
[≡]/Text	Text / Goto
[≡◆]/STTL	Subtitle / EQ
[≡i]/Index	Display / Media
[≡+]/Hold	Shift + Stop /
Power DVD	Shift + Power
Rec DVD	Rec / Rec Mode
Programme Down	Shift + CH- /
Programme Up	Shift + CH+ /
<</I<< DVD	<< / Tune-
<</I<< DVD	I<< / Preset-
>>/>>I DVD	>>I / Preset+
>>/>>I DVD	>> / Tune+
Stop DVD	Stop / Hold
Pause/Step DVD	Pause / Step / Freeze

Original	Substitut
Play DVD	Play / Slow





Original	Substitut	Original	Substitut
 Power DVD	 Power		
 Rec DVD	 Rec / Rec Mode		
 Programme Down	 CH- / Page-		
 Programme Up	 CH+ / Page+		
 I<< DVD	 I<< / Preset-		
 I<< DVD	 << / Tune-		
 >>I DVD	 >>I / Preset+		
 >>I DVD	 >> / Tune+		
 Stop DVD	 Stop / Hold		
 Pause/Step DVD	 Pause / Step / Freeze		
 Play DVD	 Play / Slow		

Original	Substitut





Original	Substitut	Original	Substitut
Power VCR	Power		
Rec VCR	Rec / Rec Mode		
Programme Down	CH- / Page-		
Programme Up	CH+ / Page+		
<</I<< VCR	I<< / Preset-		
<</I<< VCR	<< / Tune-		
>>/>>I VCR	>> / Tune+		
>>/>>I VCR	>>I / Preset+		
Stop VCR	Stop / Hold		
Pause/Step VCR	Pause / Step / Freeze		
Play VCR	Play / Slow		

Original	Substitut

