


 
 
 

 

 
 
 

 
 
 


 
 
 
 

 
 
 








 

 
 
 

 
 
 




 
 

 

 
 
 

 
 

 

 


 







Original	Substitut	Original	Substitut
	Power		Power
	Drive Select		Smart
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	*/Delete		3D
	Input Select		AV
	CH/Page Up		Ch +
	CH/Page Down		Ch -
	Prog/Check		Sleep
	Chapter		Pre Ch
	I<<		I<<
	>>I		>>I
	<<		<<
	>>		>>
	Stop		Stop
	Pause/Pause Live		Pause
	Play		Play
	i/Status		Info
	Exit		Exit
	Option		Options
	Return		Back
	Direct Navigator		List
	Function Menu		Menu
	Guide		Guide
	Up		Up
	Down		Down





Original	Substitut	Original	Substitut
	Right		Vol + Tv
	Left		Vol - Tv
	Ok		CH+ Tv
	Red		CH- Tv
	Green		
	Yellow		
	Blue		
	Rec		
	Rec Mode		
	Ext Link		
	Direct Tv Rec		
	Text		
	[≡◆]/STTL		
	Display		
	Time Slip		
	Power Tv		
	AV Tv		
			Vol +
			Vol -
			Shift + Ch +
			Shift + Ch -
			Shift + Rec
			Media
			TV/R
			Text
			Subt
			Shift + Info
			Format
			Shift + Power
			Shift + AV

