



Original	Substitut	Original	Substitut
Power	Power	<< Search	<< / Tune-
1	1	Play	Play / Slow
2	2	Search >>	>> / Tune+
3	3	I<< Skip	I<< / Preset-
4	4	Pause	Pause / Step / Freeze
5	5	Skip >>I	>>I / Preset+
6	6	Stop	Stop / Hold
7	7	Exit	Exit / Cancel / Clear
8	8	Status	Info / Angle
9	9	Option	Setup / OPT /
0	0	Return	Back / Return
Cancel	Shift + Exit / Cancel / Clear	Top Menu	D.Menu / Top
Audio	Audio / Lang I/II	Home	Menu / Home
Open/Close	Eject / Surround	Pop-Up Menu	Display / Media
PIP	Picture / Format	Up	Up
Internet	Smart / List	Down	Down
Audio	Sound / Title	Right	Right

Original	Substitut	Original	Substitut
Power	Power	<< Search	<< / Tune-
1	1	Play	Play / Slow
2	2	Search >>	>> / Tune+
3	3	I<< Skip	I<< / Preset-
4	4	Pause	Pause / Step / Freeze
5	5	Skip >>I	>>I / Preset+
6	6	Stop	Stop / Hold
7	7	Exit	Exit / Cancel / Clear
8	8	Status	Info / Angle
9	9	Option	Setup / OPT /
0	0	Return	Back / Return
Cancel	Shift + Exit / Cancel / Clear	Top Menu	D.Menu / Top
Audio	Audio / Lang I/II	Home	Menu / Home
Open/Close	Eject / Surround	Pop-Up Menu	Display / Media
PIP	Picture / Format	Up	Up
Internet	Smart / List	Down	Down
Audio	Sound / Title	Right	Right



Secondary



Original	Substitut	Original	Substitut
	Left		Left
	OK		OK
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Tv Vol+		Vol+
	Power TV		Shift + Power
	Tv Vol-		Vol-
	AV Input TV		AV / Input / RDS

Original	Substitut	Original	Substitut

