


















 



 



 


























 



 













Original	Substitut	Original	Substitut
 Power	 Power	 Cancel	 Exit / Cancel / Clear
 Auto Off	 Shift + Power	 Repeat	 Green / APP / Repeat
 Sleep	 Sleep / Timer	 Random	 Blue / Prime Video / Random
 Muting	 Mute / Dimmer	 Tape	 Shift + 5
 1	 1	 CD	 Shift + 3
 2	 2	 Tuner	 Shift + 6
 3	 3	 AUX	 Shift + 7
 Disc	 Display / Media	 EQ	 Subtitle / EQ
 4	 4	 3D AI	 Smart / List
 5	 5	 << / Tune-	 << / Tune-
 6	 6	 I<< / Preset-	 I<< / Preset-
 +10	 Guide / EPG / -/--	 >>I / Preset+	 >>I / Preset+
 7	 7	 >> / Tune+	 >> / Tune+
 8	 8	 V.Bass	 Sound / Title
 9	 9	 Left	 Left
 0	 0	 Down	 Down
 Program	 TV/Radio /	 CH- / Page-	 CH- / Page-



Program



Original	Substitut	Original	Substitut
	Stop		Stop / Hold
	Play/Pause/▲		Play / Slow
	Play/Pause/▲		Right
	Play/Pause/▲		Pause / Step / Freeze
	Play/Pause/▲		Up
	Play/Pause/▲		CH+ / Page+
	Volume-		Vol-
	Volume+		Vol+

