

 
 





 


 





 
 
 


 







 
 




 



 








 
 




 

 
 







 
 
 

 
 
 

 
 
 
 


 

 
 

 
 

 





Original		Substitut		Original		Substitut	
	Power		Power		Info		Info
	3D		3D		P +		Ch +
	1		1		P -		Ch -
	2		2		W		Shift + Smart
	3		3		Smart TV		Smart
	4		4		@		Media
	5		5		Menu		Menu
	6		6		Up		Up
	7		7		Down		Down
	8		8		Right / Zoom +		Right
	9		9		Left / Zoom -		Left
	0		0		OK		Ok
	ECO		Shift + 3D		Back		Back
	Source		AV		Exit		Exit
	Vol +		Vol +		Option		Options
	Vol -		Vol -		USB		Shift + Media
	Mute		Mute		TV		TV/R





Original	Substitut	Original	Substitut
 SLEEP	Sleep	 SLEEP	Sleep
 GUIDE	Guide	 GUIDE	Guide
 FAV	FAV	 PRE-CH	Pre Ch
 LIST	List	 LIST	List
 Red	Red	 A	Red
 Green	Green	 B	Green
 Yellow	Yellow	 C	Yellow
 Blue	Blue	 D	Blue
 CD LANG	Lang	 DUAL	Dual
 SUBTITLE	Subtitle	 SUBT	Subt
 TEXT	Text	 TEXT	Text
 I<	I<	 I<<	I<<
 Stop	Stop	 Stop	Stop
 Play / Pause	Play / Pause	 PLAY MODE	Play
 Play / Pause	Play / Pause	 II	Pause
 >I	>I	 >>I	>>I
 <<	<<	 <<	<<
	Rec		Rec
	>>		>>

