


















 

 













Original	Substitut	Original	Substitut
	Power		Power
	Info		Info / Angle
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Source		AV / Input / RDS
	0		0
	O)/I-II/Audio		Audio / Lang I/II
	Menu		Menu / Home
	Exit		Exit / Cancel / Clear

Original	Substitut	Original	Substitut
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	CH+		CH+ / Page+
	Index		Display / Media
	Vol+		Vol+
	CH-		CH- / Page-
	List		Smart / List
	Vol-		Vol-
	♥		Fav / Marker / PC
	Sleep		Sleep / Timer
	EPG		Guide / EPG / -/-
	Recall		Back / Return
	Red		Red / Netflix / Search
	<<		<< / Tune-







































Original	Substitut	Original	Substitut
 Green	 Green / APP / Repeat		
 >>	 >> / Tune+		
 Yellow	 Yellow / YouTube / Repeat		
 I<<	 I<< / Preset-		
 Blue	 Blue / Prime Video / Random		
 >>I	 >>I / Preset+		
 [=]	 Text / Goto		
 Play	 Play / Slow		
 Pause	 Pause / Step / Freeze		
 [=+]	 Zoom / Size		
 Stop/Still	 Stop / Hold		
 Radio	 TV/Radio /		
 [=♦]/[++]	 Setup / OPT /		
 [=x]	 Picture / Format		
 [=o]/Subtitle	 Subtitle / EQ		
 DMP	 D.Menu / Top		
 Rec	 Rec / Rec Mode		

Original	Substitut





Original	Substitut	Original	Substitut
	Power		Power
	Mute		Mute / Dimmer
	Text / Play/Pause		Play / Slow
	Text / Play/Pause		Pause / Step / Freeze
	Stop / Still		Stop / Hold
	Rec		Rec / Rec Mode
	Audio I/II		Audio / Lang I/II
	Subtitle / [≡o]		Subtitle / EQ
	[≡x]		Picture / Format
	Size / Aspect		Zoom / Size
	Sleep		Sleep / Timer
	Radio		TV/Radio /
	DMP		D.Menu / Top
	Source		AV / Input / RDS
	Menu		Menu / Home
	Up		Up
	Info		Info / Angle

Original	Substitut	Original	Substitut
	Left		Left
	Enter		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	Recall		Back / Return
	Vol +		Vol+
	List		Smart / List
	CH +		CH+ / Page+
	Vol -		Vol-
	Index		Display / Media
	CH -		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5





Original	Substitut
6	6
7	7
8	8
9	9
EPG	Guide / EPG / -/--
0	0
Fav	Fav / Marker / PC
Red / <<	Red / Netflix / Search
Green / >>	Green / APP / Repeat
Yellow / <<	Yellow / YouTube / Repeat
Blue / >>	Blue / Prime Video / Random
Text / Play/Pause	Shift + Play /
Red / <<	Shift + Red / Netflix /
Green / >>	Shift + Green / APP /
Yellow / <<	Shift + Yellow / YouTube /
Blue / >>	Shift + Blue / Prime /

Original	Substitut

