 










 



 


















Original	Substitut		
	Power		Power
	TV		TV/Radio /
	TV		Shift + 1
	Subtitle		Subtitle / EQ
	Teletext/MHEG		Text / Goto
	Source		AV / Input / RDS
	Red/Demo		Red / Netflix / Search
	Green/SceneA		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue/AD		Blue / Prime Video / Random
	Blue/AD		Audio / Lang I/II
	Home		Menu / Home
	Guide		Guide / EPG / -/--
	Options		Setup / OPT /
	Up		Up
	Left		Left
	OK		OK

Original	Substitut		
	Right		Right
	Back/P/P		Back / Return
	Down		Down
	Info		Info / Angle
	<<		<< / Tune-
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	>>		>> / Tune+
	Stop		Stop / Hold
	Rec		Rec / Rec Mode
	Vol+		Vol+
	Mute		Mute / Dimmer
	P+		CH+ / Page+
	Vol-		Vol-
	[<>]/Format		Shift + Picture / Format
	P-		CH- / Page-
	1		1





Original	Substitut	Original	Substitut
2 ABC	2	DVD 2	2
3 DEF	3	CD - STB 3	3
4 GHI	4	VIDEO 4	4
5 JKL	5	TAPE 5	5
6 MNO	6	TUNER 6	6
7 PQRS	7	AUX - HDD 7	7
8 TUV	8	USB 8	8
9 WXYZ	9	BLUETOOTH 9	9
♪/Sound	♪/Sound	TITLE SOUND	Sound / Title
0 .@	0	HDMI - BAT 0	0
[]/Picture	[]/Picture	FORMAT PICTURE	Picture / Format

Original	Substitut

