 

 












Original	Substitut	Original	Substitut
	Standby		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Vol+		Vol+
	Vol-		Vol-
	Left		Left
	Right		Right
	I<<		I<< / Preset-
	>>I		>>I / Preset+

Original	Substitut	Original	Substitut
	Stop		Stop / Hold
	Play/Pause		Play / Slow
	Play/Pause		Pause / Step / Freeze
	I>/Resume		Shift + Play /
	Surround		Eject / Surround
	Sound		Sound / Title
	Night		Shift + Sleep / Timer
	Mute		Mute / Dimmer
	Repeat		Green / APP / Repeat
	Repeat A-B		Yellow / YouTube / Repeat
	Sleep		Sleep / Timer
	DIM		Shift + Mute / Dimmer
	Subw +		Up
	Rear +		Shift + CH+ /
	Center +		CH+ / Page+
	Tv Vol+		Shift + Vol+
	Subw -		Down



 









 

















 



 




 




Original	Substitut
 Rear -	 Shift + CH- /
 Center -	 CH- / Page-
 Tv Vol-	 Shift + Vol-

Original	Substitut





 

 







 

 

 

 

 







 





Original		Substitut		Original		Substitut	
	Standby		Power		Stop		Stop / Hold
	1		1		Play/Pause		Play / Slow
	2		2		I>/Resume		Shift + Play /
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	Disc (DVD)		D.Menu / Top				
	0		0				
	Vol+		Vol+				
	System (DVD)		Menu / Home				
	Vol-		Vol-				
	I<<		I<< / Preset-				
	>>I		>>I / Preset+				





Original	Substitut	Original	Substitut
	Standby		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down





Original	Substitut	Original	Substitut
Standby	Power		
1	1		
2	2		
3	3		
4	4		
5	5		
6	6		
7	7		
8	8		
9	9		
0	0		

Original	Substitut

