

 

 



 


 







 



 


 




 







Original	Substitut
 Power	 Power
 MyChoice	 Display / Media
 Clock	 Sleep / Timer
 Theme Tv	 Shift + Display / Media
 Channel GRID	 Shift + D.Menu / Top Menu
 Guide	 Guide / EPG / -/--
 Smart TV	 Smart / List
 Source	 AV / Input / RDS
 TV	 TV/Radio /
 Format	 Picture / Format
 Home	 Menu / Home
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 List	 Shift + Smart / List
 Up	 Up
 Info	 Info / Angle
 Left	 Left

Original	Substitut
 OK	 OK
 Right	 Right
 Adjust	 D.Menu / Top
 Down	 Down
 Options	 Setup / OPT /
 Back	 Back / Return
 CH-	 CH- / Page-
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 Vol+	 Vol+
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 1	 1
 2	 2





Original		Substitut		Original		Substitut	
DEF 3	3	CD - STB 3	3				
4 GHI	4	VIDEO 4	4				
5 JKL	5	TAPE 5	5				
MNO 6	6	TUNER 6	6				
7 PQRS	7	AUX - HDD 7	7				
8 TUV	8	USB 8	8				
WXYZ 9	9	BLUETOOTH 9	9				
SUBTITLE	Subtitle	EQ SUBTITLE	Subtitle / EQ				
0	0	HDMI - BAT 0	0				
TEXT	Text	GOTO TEXT	Text / Goto				

