









 

 

 

 

 

 

 

 

 

 

 

 



 

 

 



 



 



 

 

 

 

 



 

 








 




Original		Substitut		Original		Substitut	
	Power		Power		>>I		>>I / Preset+
	Power USB/Audio		Smart / List		>>I CD/FM		Right
	Open/Close		Eject / Surround		OK USB/Audio		5
	Power CD/FM		Shift + Power		OK		OK
	CD/FM		3		OK CD/FM		Shift + OK
	Dock		Green / APP / Repeat		Play USB/Audio In		Shift + Play /
	USB/Audio In		8		Play/Pause CD/FM		Pause / Step / Freeze
	Preset/Album Up USB/Audio In		CH+ / Page+		Play/Pause		Play / Slow
	Preset/Album		Up		Vol+		Vol+
	Preset/Album Up CD/FM		Shift + Up		Vol-		Vol-
	Preset/Album Down USB/Audio		CH- / Page-		Menu USB/Audio		Shift + Display / Media
	Preset/Album		Down		Stop USB/Audio In		>> / Tune+
	Preset/Album Down CD/FM		Shift + Down		Stop CD/FM		Shift + Stop /
	I<< USB/Audio In		Shift + I<< / Preset-		Menu CD/FM		D.Menu / Top
	I<<		I<< / Preset-		Stop		Stop / Hold
	I<< CD/FM		Left		Menu		Menu / Home
	>>I USB/Audio In		Shift + >>I / Preset+		Display		Display / Media





Original	Substitut
 Display CD/FM	 Picture / Format
 Display USB/Audio In	 Info / Angle
 Mute	 Mute / Dimmer
 Repeat Shuffle CD/FM	 AV / Input / RDS
 Repeat/Shuffle	 << / Tune-
 Repeat/Shuffle USB/Audio In	 Back / Return
 Prog CD/FM	 Setup / OPT /
 Prog	 Text / Goto
 Prog USB/Audio In	 Exit / Cancel / Clear
 Sound	 Sound / Title
 Clock	 Blue / Prime Video / Random
 Sleep/Timer	 Sleep / Timer

Original	Substitut

