

Original	Substitut	Original	Substitut
Standby/On	 Power	6	 6
Mute	 Mute / Dimmer	7	 7
Menu	 Menu / Home	8	 8
Up	 Up	9	 9
Left	 Left	0	 0
Right	 Right		
Status/Exit	 Exit / Cancel / Clear		
Down	 Down		
Vol+	 Vol+		
P+	 CH+ / Page+		
Vol-	 Vol-		
P-	 CH- / Page-		
1	 1		
2	 2		
3	 3		
4	 4		
5	 5		



Original	Substitut	
Standby/On		Power
Rec		Rec / Rec Mode
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
0		0
Status/Exit		Exit / Cancel / Clear
Clear	 + 	Shift + Exit / Cancel / Clear
Play		Play / Slow
Menu		Menu / Home
Up		Up

Original	Substitut	
Stop		Stop / Hold
Down		Down
Right		Right
>>		>> / Tune+
<<		<< / Tune-
Left		Left
Vol+		Vol+
Vol-		Vol-
P+		CH+ / Page+
P-		CH- / Page-
System		Display / Media
Mute		Mute / Dimmer
> </Still		Pause / Step / Freeze

