






 

 

 

 

 

 




 

 

 


















 



 



 
 
 

 














Original	Substitut	Original	Substitut
 Standby / On	 Power	 ShowView	 Smart
 VCR Eject	 Shift + Exit	 Cancel	 Exit
 DVD Open / Close	 Eject	 Title Menu / Top Menu	 Menu
 DVD / VCR	 Media	 Up / CH +	 Up
 1	 1	 Up / CH +	 Ch +
 2	 2	 Down / CH -	 Down
 3	 3	 Down / CH -	 Ch -
 4	 4	 Right / TRK +	 Right
 5	 5	 Left / TRK -	 Left
 6	 6	 Enter	 Ok
 7	 7	 DVD Menu	 D. Menu
 8	 8	 Setup	 Options
 9	 9	 Stop	 Stop
 0	 0	 Play	 Play
 Return	 Back	 Pause / Still	 Pause
 Timer Rec	 Shift + AV	 I<< Skip / Index -	 I<<
 Input Select	 AV	 << Rew / Search	 <<





Original	Substitut
>> F.Fwd /	>>
>>I Skip / Index	>>I
One Touch	Text
CM Skip	Format
Slow I>	+ Shift + >>
Rec	Rec
Rec Mode / Speed	+ Shift + Rec
Dubbing	3D
Audio / Audio select	Dual
Display	Info
Zoom	+ Shift + Eject
Repeat A-B	+ Shift + Text
Zero Return	+ Shift + Back
Counter Reset / Angle	Sleep
Subtitle / ATR	Subt
Play Mode /	+ Shift + Play
Clock Counter	Mute

Original	Substitut
TV / VCR	TV/R

