









 

 


 








 







 






 






 

 

 


 







Original	Substitut
 Power	 Power
 Stop / Open/Close	 Eject / Surround
 Menu	 Menu / Home
 Return	 Back / Return
 Volume+	 Vol+
 Pause / Up	 Pause / Step / Freeze
 Pause / Up	 Up
 REV / Left	 Left
 REV / Left	 << / Tune-
 Play / Enter	 OK
 Play / Enter	 Play / Slow
 FWD / Right	 Right
 Stop / Down	 Down
 FWD / Right	 >> / Tune+
 Prev	 I<< / Preset-
 Next	 >>I / Preset+
 Last Memo	 D.Menu / Top

Original	Substitut
 Condition	 Setup / OPT /
 Stop / Down	 Stop / Hold
 Volume-	 Vol-
 Aspect	 Picture / Format
 Subtitle	 Subtitle / EQ
 Angle	 Info / Angle
 Mode	 Smart / List
 Audio	 Audio / Lang I/II
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9





Original	Substitut	Original	Substitut
	0		0
	Clear		Exit / Cancel / Clear
	Program		TV/Radio /
	Title		Sound / Title
	Display		Display / Media
	+10		Guide / EPG / -/--
	Random		Blue / Prime Video / Random
	CHP/Time		Sleep / Timer
	Repeat		Green / APP / Repeat
	Repeat A-B		Yellow / YouTube / Repeat
	Step II>		CH+ / Page+
	<II Step		CH- / Page-
	Disc / Side A/B		Red / Netflix / Search

