 



 



 



 



 



 



 







 



 









 











 

 



 

 








Original	Substitut	Original	Substitut
 Power	 Power	 Jump	 Smart / List
 S.Mode	 Sound / Title	 .	 Display / Media
 MTS	 Text / Goto	 Mute	 Mute / Dimmer
 P.Mode	 Picture / Format	 Input	 AV / Input / RDS
 Caption	 Subtitle / EQ	 Vol+	 Vol+
 Sleep	 Sleep / Timer	 Vol-	 Vol-
 P.Size	 Zoom / Size	 CH+	 CH+ / Page+
 1	 1	 CH-	 CH- / Page-
 2	 2	 Guide	 Guide / EPG / -/-
 3	 3	 Exit	 Exit / Cancel / Clear
 4	 4	 Up	 Up
 5	 5	 Down	 Down
 6	 6	 Down	 Shift + Down
 7	 7	 Left	 Left
 8	 8	 OK	 OK
 9	 9	 Info	 Info / Angle
 0	 0	 Menu	 Menu / Home

Original	Substitut	Original	Substitut
 Power	 Mute / Dimmer	 SHIFT	 TV
 SLOW	 STEP-FREEZE	 HOLD	 REC MODE
 PLAY	 PAUSE	 PRESET-	 PRESET+
 TUNE-	 TUNE+	 PRESET-	 PRESET+
 TITLE	 LANG VII	 EQ	 SURROUND
 SOUND	 AUDIO	 SUBTITLE	 PROGRAM
 FORMAT	 SIZE	 TIMER	 TV RADIO
 PICTURE	 ZOOM	 SLEEP	 RDS
 TOP MENU	 OPT-TOOLS	 GOTO	 AV INPUT
 D.MENU	 SETUP	 TEXT	 AV INPUT
 HOME	 ANGLE	 INFO	 OK
 MENU	 CLEAR	 RETURN	 EXIT
 EXIT	 CANCEL	 LIST	 CH PAGE +
 VOL +	 SMART	 CH PAGE -	 TV
 VOL -	 MEDIA DISPLAY	 CH PAGE	 DVD
 TV	 DVD	 CD - STB	 VIDEO
 DVD	 TAPE	 TUNER	 AUX - HDD
 CD - STB	 AUX - HDD	 USB	 BLUETOOTH
 VIDEO	 TAPE	 TUNER	HDMI - BAT
AUX - HDD	USB	BLUETOOTH	GUIDE EPG
TAPE	TUNER	HDMI - BAT	FAV MARKER
TUNER	HDMI - BAT	PC	NETFLIX
AUX - HDD	BLUETOOTH	FAV MARKER	APP
HDMI - BAT	GUIDE EPG	FAV MARKER	YouTube
GUIDE EPG	NETFLIX	APP	Prime Video
FAV MARKER	YouTube	Prime Video	SEARCH
NETFLIX	APP	Prime Video	REPEAT
APP	YouTube	Prime Video	REPEAT A-B
YouTube	Prime Video	SEARCH	RANDOM
Prime Video	SEARCH	REPEAT	REPEAT A-B
RANDOM	REPEAT A-B	REPEAT	RANDOM



