



































Original	Substitut	Original	Substitut
On/Off	 Power	TV/AV	 AV / Input / RDS
Mute	 Mute / Dimmer	Menu	 Menu / Home
Still	 Pause / Step / Freeze	Menu Up	 Up
Txt Stop	 Stop / Hold	Info	 Info / Angle
Tune-	 << / Tune-	Menu Left	 Left
Tune+	 >> / Tune+	OK Enter	 OK
Tone-	 I<< / Preset-	Menu Right	 Right
Tone+	 >>I / Preset+	Back	 Exit / Cancel / Clear
Menu audio	 Audio / Lang I/II	Menu Down	 Down
Subt.List	 Subtitle / EQ	Swap	 Back / Return
Bright+ Mode	 Picture / Format	Volume+	 Vol+
Txt Expand	 Zoom / Size	View	 Smart / List
Sleep Timer	 Sleep / Timer	Chan.Up	 CH+ / Page+
Return TV	 TV/Radio /	Volume-	 Vol-
Update	 D.Menu / Top	Display	 Display / Media
Help	 Setup / OPT /	Chan.Down	 CH- / Page-
Text	 Text / Goto	1	 1



Original	Substitut	Original	Substitut
2		2	2
3		3	3
4		4	4
5		5	5
6		6	6
7		7	7
8		8	8
9		9	9
Guide -/-- 1.		Guide / EPG / -/--	
0/10		0	
2.Fav P/C 2.		Fav / Marker / PC	
Red		Red / Netflix / Search	
Green		Green / APP / Repeat	
Yellow		Yellow / YouTube / Repeat	
Blue		Blue / Prime Video / Random	
On/Off	+	Shift + Power	
Mix Scan	+	Shift + Text / Goto	

Goto

Original	Substitut	Original	Substitut
AV 2	+	Shift + AV / Input / RDS	
Audio+	+	Shift + Vol+	
Audio-	+	Shift + Vol-	
Disp	+	Shift + Display / Media	
On Pip	+	Shift + 1	
Dim Pip	+	Shift + 2	
Rotate Pip	+	Shift + 3	
Search	+	Shift + Red / Netflix /	

