 

 



 

 

 

 

 

 

 

 

 
 

 


 







Original	Substitut	Original	Substitut
	Standby		Power
	Auto		Smart / List
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Recall		Back / Return
	Vol+		Vol+
	Aspect		Shift + Picture / Format

Original	Substitut	Original	Substitut
	Audio		Audio / Lang I/II
	CH+		CH+ / Page+
	Vol-		Vol-
	Display		Display / Media
	CH-		CH- / Page-
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Exit		Exit / Cancel / Clear
	Input		AV / Input / RDS
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	Sleep		Sleep / Timer
	FAV		Fav / Marker / PC





Original	Substitut
FAV-	Shift + CH PAGE -
FAV+	Shift + CH PAGE +
EPG	GUIDE EPG
TEXT	GOTO TEXT
HOLD	Shift + HOLD
TV/RADIO	PROGRAM TV/RADIO
SUBTITLE	EQ SUBTITLE
INDEX	ANGLE INFO
SIZE	SIZE ZOOM
REVEAL	OPT-TOOLS SETUP
SUBPAGE	SURROUND
MEDIA	Shift + MEDIA DISPLAY
Play	SLOW
Pause	STEP-FREEZE
<<	TUNE-
>>	TUNE+
Rec	REC MODE

Original	Substitut
Stop	STOP HOLD
I<<	PRESET-
>>I	PRESET+
Red	NETFLIX SEARCH
Green	APP REPEAT
Yellow	YouTube REPEAT A-B
Blue	Prime Video RANDOM

