



 



 



 

 



 

 



 



 






























































 








 



Original		Substitut		Original		Substitut	
	Power		Power		Down		Down
	Mute		Mute / Dimmer		Exit		Exit / Cancel / Clear
	Picture		Picture / Format		1		1
	Sound		Sound / Title		2		2
	Aspect		Shift + Picture / Format		3		3
	Sleep		Sleep / Timer		4		4
	Subtitle		Subtitle / EQ		5		5
	CH. List		Smart / List		6		6
	EPG		Guide / EPG / -/--		7		7
	FAV		Fav / Marker / PC		8		8
	TV / Radio		TV/Radio /		9		9
	Up		Up		0		0
	Input		AV / Input / RDS		Recall		Back / Return
	Left		Left		Info		Info / Angle
	OK		OK		Vol +		Vol+
	Right		Right		Rec		Rec / Rec Mode
	Menu		Menu / Home		Rec. List		Display / Media





Original	Substitut	Original	Substitut
	CH +		CH+ / Page+
	Vol -		Vol-
	Play / Pause		Play / Slow
	Play / Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	CH -		CH- / Page-
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	TV / TXT		Text / Goto
	Cancel		Shift + Exit / Cancel / Clear
	Reveal		Eject / Surround
	Nicam / A2		Audio / Lang I/II
	<< / Index		<< / Tune-
	>> / Hold		>> / Tune+
	I<< / Size		I<< / Preset-

Original	Substitut
	>>I / Subpage
	>>I / Preset+

